Архангельск (8182)63-90-72 **А**стана (7172)727-132 **А**страхань (8512)99-46-04 Барнаул (3852)73-04-60 Белгород (4722)40-23-64 Брянск (4832)59-03-52 **В**ладивосток (423)249-28-31 **В**олгоград (844)278-03-48 кангельск (отоглоз-90-12 Астана (1772)1-77-152 Астрахань (оз 12)99-40-04 Варнаул (оз 25/13-04-05 Велогда (8172)26-41-59 Воронеж (473)204-51-73 Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Казань (843)206-01-48 Калининград (4012)72-03-81 Калуга (4842)92-23-65 Кемерово (3842)65-04-62 Киров (8332)68-02-04 Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Омск (3812)21-46-40 Орел (4862)44-53-42 Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15 Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78 Севастополь (8692)22-31-93 Симферополь (3652)67-13-56 Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Сургут (3462)77-98-35 Тверь (4822)63-31-35 Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59 Уфа (347)229-48-12 Хабаровск (4212)92-98-04 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93

Единый адрес: ath@nt-rt.ru | http://albright.nt-rt.ru

The SW88 has been designed for direct current loads, particularly motors as used on electric vehicles such as industrial trucks. Developed for both interrupted and uninterrupted loads, the SW88 is suitable for switching Resistive, Capacitive and Inductive loads

Interrupted current - opening and closing on load with frequent switching (results in increased contact resistance).

Uninterrupted current - no or infrequent load switching requirements (maintains a lower contact resistance).

The SW88 features single pole double breaking main contacts with silver alloy tips, which are weld resistant, hard wearing and have excellent conductivity. The SW88 main contact circuit, designed for motor reversing, is such that it has a built in failsafe, so that if both coils are energised simultaneously the contact arrangement is open circuits. The SW88 has M8 stud main terminals and 6.3mm spade coil connections. Mounted using supplied brackets, mounting can be horizontal or vertical, when vertical the M8 contact studs should point upwards. If the requirement is for downwards orientation we can adjust the contactor to compensate for this.

119[4.69]

102[4.00]



SW88

SW88A (Auxiliary Contacts)



Please check our web site for product UL status

§ Normally Open contacts only - normally closed contacts are not designed to make and break current


Interrupted


Uninterrupted

100A

Application

Thermal Current Rating (Ith)

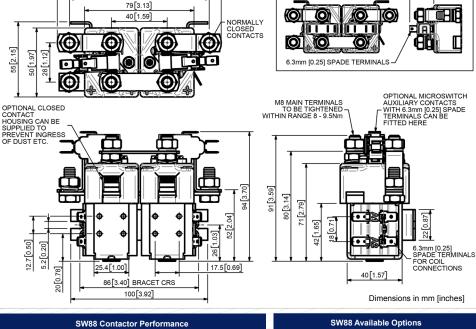

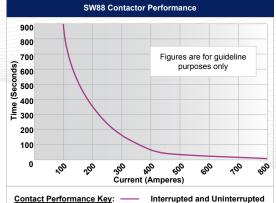

	Silver Plating
Connection Diagram	Coil
· ·	AC Rectifier Board (Fitted)
SW88C SW88A	Coil Suppression†
AUXILIARY AUXILIARY CONTACT CONTACT	Flying Leads
4 AUX. CONTACTS AUX. CONTACTS NO N'C N'C N'C N'O N'O N'C N'C N'O	Manual Override Operation
2 MOTOR MOTOR MOTOR	SW88A SW88A Coil Suppression† Flying Leads AUX CONTACTS NO NC NC NO
Connection Diagram SW88C SW88A Coil Suppn Flying Lear MOTOR MOTOR ARMATURE FIELD MOTOR ARMATURE FIELD MOTOR ARMATURE FIELD MOTOR ARMATURE MOTOR ARMATURE MOTOR ARMATURE MOTOR FIELD MOTOR FIELD MOTOR ARMATURE MOTOR FIELD MOTOR ARMATURE MS Termin Vacuum Im Key: Opti	M5 Terminal Board
	Vacuum Impregnation
\rightarrow	Key: Optional O Stand
	† Connections become pol
	[‡] Open Housing Available

Current

General		Suffix
Auxiliary Contacts	0	Α
Auxiliary Contacts - V3	0	С
Magnetic Blowouts [†]	0	В
Magnetic Blowouts - High Powered [†]	0	В
Armature Cap	0	
Mounting Brackets	•	
Magnetic Latching† (Not fail safe)	0	M
Closed Contact Housing [‡]	0	
Environmentally Protected IP66	X	
EE Type (Steel Shroud)	X	
Contacts		
Large Tips	0	L
Textured Tips	0	Т
Silver Plating	X	
Coil		
AC Rectifier Board (Fitted)	0	
Coil Suppression [†]	0	
Flying Leads	0	F
Manual Override Operation	0	
M4 Stud Terminals	Х	
M5 Terminal Board	0	
Vacuum Impregnation	0	
Key: Optional ○ Standard •	Not Availa	able X

† Connections become polarity sensitive